



FW47

User Guide

Parts of the watch



1. Touch screen
2. Power button
3. Side button
4. Charging points
5. Sensor

First Time Use

Charge your watch before using for the first time. You will need to charge it for about 3.5 hours.

Charging steps:

1. Place the watch on top of the dock with the charging points on the back of the watch aligned with the charging pins on the charging dock. It will snap into position once correctly aligned.



2. Plug the USB charging dock into a USB charging adaptor (not included) or a USB port on your computer.
3. Once fully charged (battery icon is full), unplug the charging dock from the charger.

SMART-TIME PRO App

Search for the SMART-TIME PRO app in the app store to download, or scan the QR code below for installation.



Google Play and the Google Play logo are trademarks of Google LLC.

Apple, the Apple logo, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries and regions. App Store is a service mark of Apple Inc.



Find your user manual language





Turn on the Watch

Once the watch is fully charged, press and hold the power button for 5 seconds to turn on the watch. To turn off the watch, press and hold the power button for 5 seconds.

Connect to the App

Open the SMART-TIME PRO app on your smart phone. Once the app is open, follow: Device > Add device and select the first "FW47" from the list. The watch will display the below screen:



Tap on  to confirm pairing and once connection is successful, the Bluetooth® icon will show 

The Join Fit app supports Android 5.0+ and iOS 11.0+ devices. The watch can only be paired with one device at a time. To pair to another device, please disconnect the current paired device.

Disconnect from the App

Open the SMART-TIME PRO app. Select "Device" and select the paired device and tap "Ok" to disconnect the watch. On iOS devices, you will also need to open the settings menu on your iPhone. Go to Bluetooth settings, tap on the "i" icon on the right side of "FW47" and then tap 'Forget This Device' to finish disconnecting.

Turn On the Screen

To turn on the screen, press the power button or raise your arm if you're wearing the watch. Press the button again to turn off the screen. Raising your arm too quickly/slowly may not turn the screen on.

Note: You will need to turn on the "Flip over" function on the SMART-TIME PRO app for the function to work.

Functions On the Home Screen

- Swipe left to go to the data menu (pedometer/heart rate/sleep monitor). From here, swipe left/right to navigate to different data menu screens.
- Swipe right for the notifications screen.
- Swipe down for the shortcut menu. From here, swipe up to go back to the home screen.
- Swipe up to go to the applications menu. From here, swipe up/down to navigate to the different application menu screens. Press and hold the screen for the watch face selection page. Swipe left/right for different options, then tap the screen again to select.

Note: There are 3 watch faces available.

Functions On Other Screens

- Press the power button to return to the home screen.
- Press the side button to go to the next page and/or confirm the selection.

GPS Functionality

The watch has built-in GPS functionality allowing you to accurately track your distance and other data including altitude and walking/jogging pace.

When a sport mode is selected (see next page), the watch will automatically search for the GPS location and display distance, pace and altitude data.

Applications

Sports

The watch has 10 sports modes: running, walking, cycling, climbing, treadmill, yoga, elliptical, basketball, football and badminton. When an activity has been selected, the watch will display exercise data depending on the mode selected.

Tap on the stop/pause icon when you wish to end or pause the activity.

Heart rate

Tap on the heart rate icon to measure your heart rate. You can also set automated monitoring time intervals on the SMART-TIME PRO app.

Blood Pressure

Tap on the blood pressure icon to measure your blood pressure.

NOTE: For accurate measurements for both heart rate and blood pressure functions, ensure the following:

- The watch has good contact with your wrist.
- Check that the sensor is clean and there is no dirt or debris covering it.
- The results and measurements of heart rate and blood pressure data cannot be used for medical reference and should be used as a guide only.

Alarm Clock

Tap on the alarm clock icon to view your alarms. You can set the alarms on the SMART - TIME PRO app and sync it to your watch.

10

Music

After your device is connected to the watch, while your device is playing music, tap on the music icon to control music by playing/pausing and switching songs on the watch.

Stopwatch

Tap on the stopwatch icon to enter the stopwatch function. Tap the start icon to start timing; the left icon is a single timing record and the right icon is pause. After pausing, tap on the top single timing record to view the records at different times.

Countdown

Tap on the countdown icon and select the desired time. The watch will light up during the countdown time and once the set time is over, the watch will vibrate.

11

Remote Capture

Tap on the remote capture icon to use the watch as a camera remote for your phone. When the watch is connected with your phone, open the SMART-TIME PRO app and select Device>Take Photo. Once SMART-TIME PRO app is opened on your phone, tap the icon on the watch screen to take a photo with your phone.

Find Phone

After connected with the SMART-TIME PRO app, tap on "Find Phone" on the watch; your phone will ring. Tap pause to exit.

GPS Location

Tap on the GPS Location icon to view the current latitude and longitude of your current location. If you are inside a building or underground, this function will not work.

12

Pedometer

Track the number of steps taken, distance walked and calories burnt.

Sleep Monitor

The sleep monitor will display your sleep data. After synchronising with the SMART-TIME PRO app, you can view more detailed records on your smart phone.


Settings

Tap on the settings icon to access and change the following settings:

Brightness

Tap on the + or - icons to adjust screen brightness.

Power Off

Select  to shut down your watch.

13

Restore Factory Settings

Restore all settings to the factory state.

About

Display the product name, hardware address and software version.

Shortcut Menu

Bluetooth

Turn Bluetooth® on/off.

Vibration

Tap to set to vibrate mode.

Do not disturb

Turn on to block incoming calls and notifications.

Low Power

Tap to turn on battery saver mode.

Brightness

Adjust display screen brightness.

Settings

Tap to access settings menu.

14

Change The Straps

Turn the watch over (see below), push the top needle knob to the right to take off the original strap, then fit the new strap.

Note: only one strap is included with this product.



15

Specifications

Display	1.3", 240 x 240 pixels
Charging time	3.5 hrs (approx.)
Charging base input	5VDC, 200mA
Bluetooth Range	< 10m
Built-In Battery	Li-ion 3.7V 360mAh

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

GUARANTEE

• The manufacturer guarantees that the Maxcom Smartwatch product is free from material defects and implementing measures for normal use within 24 months from the date of purchase.

In the event of a defect or malfunction, please contact retailer or authorized distributor. The proof of purchase needs to be attached to the submitted complaint. The guarantor will repair or replace free of charge products that do not meet the parameters specified in the Warranty within a reasonable time.

16

• This Warranty applies to the original purchaser only. Its range covers the territory of the EU

• The warranty does not exclude, limit or suspend the buyer's rights resulting from the provisions on the warranty for defects in the sold item

• Technical and warranty support is available at www.maxcom.pl

THE WARRANTY DOES NOT COVER:

- Normal wear and tear, including batteries (rechargeable batteries) unless the damage was caused by defects in materials or workmanship
- Mechanical, thermal, chemical and other damages
- Defects resulting from: improper use and not obeying instruction manual;

making unauthorized changes; use or storage in an inconsistent manner with the technical specifications of the product; improper maintenance; application items other than the one supplied or the use of any items not intended for use with the product; technical work performed by unauthorized personnel.

The above applies to the rules for the validity of the warranty on the goods consumption resulting from Directive 1999/44 / EC.

SIMPLIFIED DECLARATION OF CONFORMITY

This equipment complies with the Directive of the European Parliament and of the Council 2014/53 / EU on radio equipment and telecommunications and their mutual recognition. This equipment can be used in all EU countries European Union and in all countries where the Directive applies 2014/53 / UE.

NOTE: THIS EQUIPMENT SHOULD NOT BE DISPOSED WITH WASTE COMMUNAL!

The product should be used by selective collection in prepared for this points. Proper handling of used electrical and electronic equipment contributes to the avoidance of harmful consequences for human health and the environment resulting from the presence of dangerous elements, as well as improper storage and processing of such equipment. The device contains a Li-ion battery. Used batteries are harmful to your health the environment. They should be stored in a specially designated point, in a suitable container in accordance with applicable regulations. Batteries and accumulators must not be disposed of with municipal waste, they must be handed over to collection points.

CAUTION: DO NOT PUT BATTERIES IN A FIRE

Manufacturer and Distributor:

Maxcom S.A.
Ul. Towarowa 23a
43-100 Tychy
Poland



17