

SMARTWATCH MAXCOM FW55 AURUM PRO

User Guide




Thank you for choosing this smart watch. This watch will provide higher help and enjoyment for your exercise and health. For your convenience, please read the instructions carefully and follow the steps in the instructions.

Watch client download
Scan the QR code to download and install the watch client or search for the "Da Fit" download installation.



Introduction to the whole machine

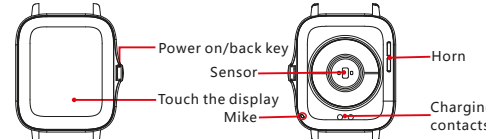

Note: Press and hold the power-on key to turn the watch on

The watch is charged and activated

Before you use the watch for the first time, you need to charge to activate the metal point attached to the back of the watch using the equipped magnetic suction charging cable, and at the other end of the charging cable you can connect to the USB charging head or computer USB port.

Connect the watch

This watch dual Bluetooth call watch, if you want to use the watch properly need to connect two Bluetooth (APP-side Bluetooth and mobile phone end (audio) Bluetooth)

1.APP-end connection (for data transfer)

Open the APP and click "Binding Watch" to find the watch you need to connect to. If more than one device is nearby, please filter according to the MAC address of the watch, the connection is successful as follows:


1) ENG

2: Mobile phone connection (for calls)

1) Turn on the audio switch of the watch: swipe down in the main interface of the watch, enter the control center, tap the audio switch icon, turn on the audio status as shown:




2) Go to the mobile Phone Bluetooth search page, search and connect the hand table, the connection is successful as shown:

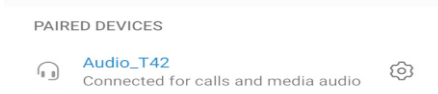

After the watch is successfully bound, each time the client is opened in the future, the watch will automatically connect to the phone and the data can be synchronized by pulling down on the client data page.


Introduction to the call function

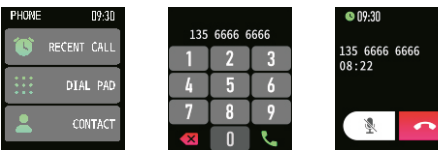

When your watch is connected to your phone, you can use your watch to dial-control your phone to make calls, or you can answer calls from your phone on your watch. You can also view your watch's call history. When using the call function, you need to make sure that your watch is connected to your phone in a stable state.


2) ENG

Watch operating instructions

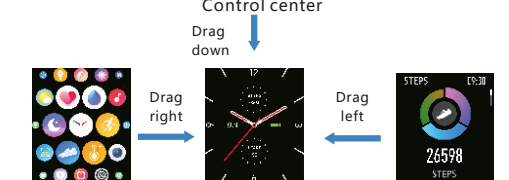


The list of features

Note: Click on the icon to jump directly into the corresponding function, click on the middle clock icon to jump directly to the table page

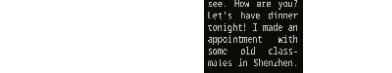


The list of messages

Introduction to the function of the watch

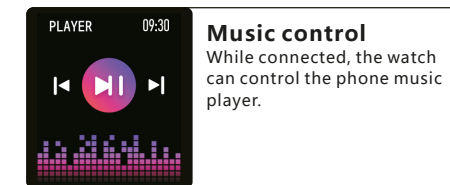

3) ENG


STEPS

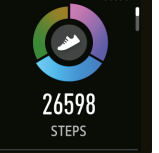

Motion information

The watch records and displays the number of steps you walk each day, the calories burned, and mileage information. More detailed analysis and data records can be viewed in the client.


SLEEP

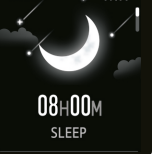

Sleep

Your watch can record and show the total length of your sleep last night and the length of your deep and light sleep. More detailed analysis and data records can be viewed in the client.


HR

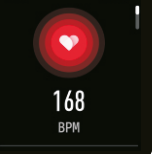

Heart rate

The watch can record and display a heart rate of 24h throughout the day. Click on the heart rate interface to measure the current heart rate. More detailed analysis and data records can be viewed in the client.

BP

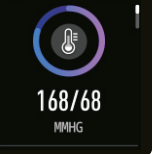


Blood pressure

Click on the blood pressure interface to measure the current blood pressure value. More detailed analysis and data records can be viewed in the client.

4) ENG


SPO2

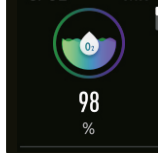

Blood oxygen

Click on the oxygen interface to measure the current oxygen value. More detailed analysis and data records can be viewed in the client.

WEATHER

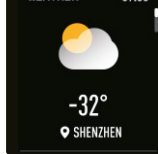

Weather information

The weather page shows the current weather, air quality information, and tomorrow's conditions. Weather information needs to be connected to the client before data can be obtained, and weather information cannot be updated if disconnected for a long time.


TRAINING



Exercise

8 sports modes to choose from, including: walking, running, cycling, basketball, football, badminton, skipping rope, swimming. More detailed analysis and data records can be viewed in the client.

LIUKE

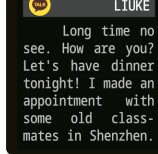


Message push

The watch can receive notifications on the display phone, and you can set push items on and off in the client.

5) ENG


Camera

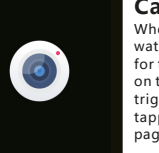

Camera control

When the phone is connected, the watch can be used as a remote control for the phone's camera. When you turn on the camera on your phone, you can trigger the phone's camera door by tapping on the watch camera control page.


BRIGHTNESS

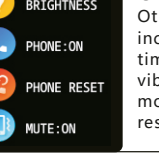

Other features

Other functions of the watch include stopwatch, alarm clock, timer, brightness adjustment, vibration switch, do not disturb mode, cinema mode, factory resumption, shutdown, about.

12

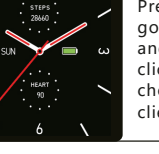

The dial switches

Press and hold the dial page, go to the dial switch, cross left and right to switch the dial, click confirm. You can also choose to switch dials in the client

Precautions

- 1, do not use charging voltage greater than 5V, charging current greater than 2A adapter, charging time of 2-3 hours.
2. Do not charge with water stains.
- 3, this product is an electronic monitoring product, not as a medical reference, measurement data for reference only.

6) ENG

Simplified EU declaration of conformity

MAXCOM SA hereby declares that the radio equipment type FW55 is in compliance with Directive 2014/53/EU, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address www.maxcom.pl/pl/content/23-deklaracje

Information on environmental protection

NOTE: THIS EQUIPMENT SHOULD NOT BE THROWN AWAY FROM THIS EQUIPMENT WITH MUNICIPAL WASTE!



The product should be used by selective collection in prepared points. Proper handling WEEE contributes to avoid consequences harmful to human health and the environment resulting from the presence of hazardous elements, as well as improper storage and processing of such equipment.

The device contains a Li-ion battery. Batteries that are worn out are harmful to the environment. They should be stored specifically at the point intended for this purpose, in a suitable container, in accordance with applicable regulations.

Batteries and accumulators must not be disposed of with the waste municipalities, take them to the collection point.

Descarcă manualul de utilizare.

Encuentre el idioma de su manual de usuario.

Encontre o idioma do seu manual do usuário.



CAUTION:
DO NOT DISCONNECT THE BATTERY
NOR THROW BATTERIES INTO FIRE

7) ENG